



SPORT FRONT TRAY INSTALLATION

For Benno® Boost (EVO 4 and later) and 46er

**READ CAREFULLY BEFORE INSTALLATION AND USAGE.
TO BE INSTALLED BY MECHANIC AT AUTHORIZED BENNO DEALER.**

x2  M8 / 86mm	x2  M6 / 12mm		<div style="border: 1px solid black; padding: 5px; width: fit-content;"> Supplied but NOT USED for this installation </div>  x4 Spacer (E) Flat/Curved 9.2mm	<div style="background-color: #333; color: white; padding: 5px; text-align: center;"> COMPATIBILITY </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: #eee;">BOOST</td> <td>EVO 4, EVO 5</td> </tr> <tr> <td style="background-color: #eee;">46ER</td> <td></td> </tr> </table> <p style="font-size: small; text-align: center;">FOR BOOST EVOLUTION FINDER GO TO: BENNOBIKES.COM/BOOST/EVOLUTION</p> <p style="font-size: x-small;">EVO (evolution) replaces model years and refers to design generations.</p>	BOOST	EVO 4, EVO 5	46ER	
BOOST	EVO 4, EVO 5							
46ER								
x4  Spacer (A) Flat/Curved 6.5mm	x2  Spacer (B) Flat/Curved 5.2mm	x2  Spacer (C) Flat/Curved 2.9mm	x4  Washer (D)					

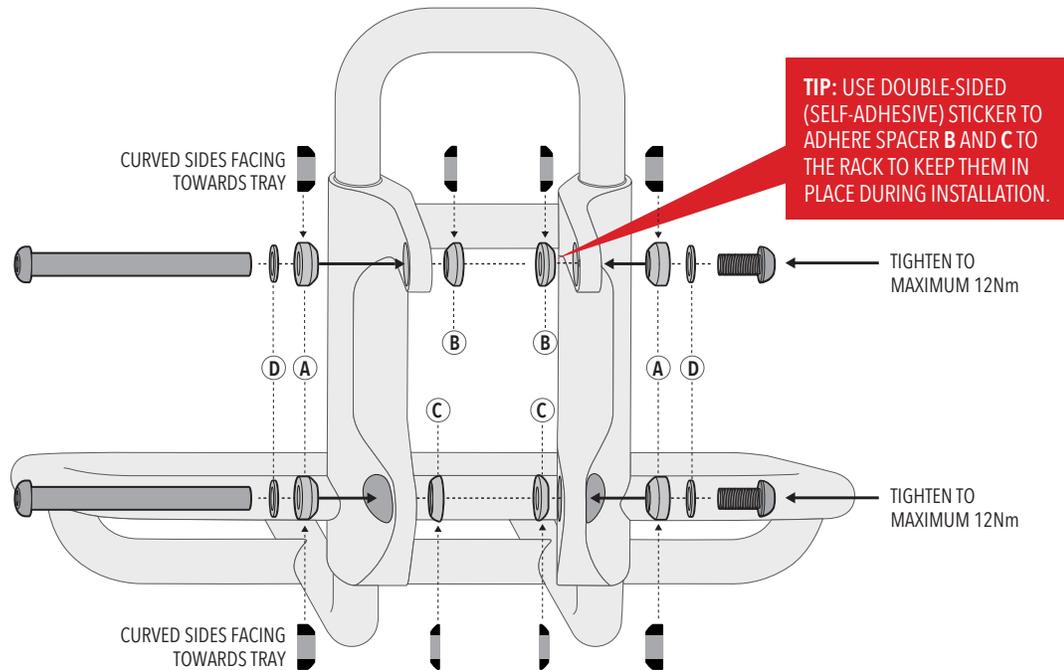

IMPORTANT: *Notes to mechanic:* See diagram. Install Benno Sport Front Tray only on compatible Benno Bikes and use only pre-drilled holes and fittings. Bolts are to be tightened to maximum 12Nm. Do not mount to damaged bikes or if tray is damaged. Use only original Benno hardware (included). Do not modify tray, mounting points on bike, change position or drill new holes as this will void any warranties and/or claims for liability. Ensure firm and proper installation and safe clearance to the front wheel and headlight.

Notes to owner: Periodically check to make sure the nuts and bolts remain tight as vibrations may loosen them. Always make sure no parts of the body or clothing come near moving parts on the bicycle such as chain, spokes, tires or brakes

WARNING: BENNO SPORT FRONT TRAY IS DESIGNED TO CARRY CARGO ONLY - NO PASSENGERS. SECURE YOUR LOAD FIRMLY AND ENSURE SAFE CLEARANCE TO THE FRONT WHEEL AND HEADLIGHT. DO NOT EXCEED MAX LOAD INDICATED ON TRAY OR MAX GROSS WEIGHT OF BIKE INDICATED ON LOWER SEAT TUBE OF BIKE.

