


BOOST PLATFORM RAIL INSTALLATION

For Benno® Boost (EVO 1,2,3) Rear Racks


READ CAREFULLY BEFORE INSTALLATION AND USAGE. TO BE INSTALLED BY MECHANIC AT AUTHORIZED BENNO DEALER.

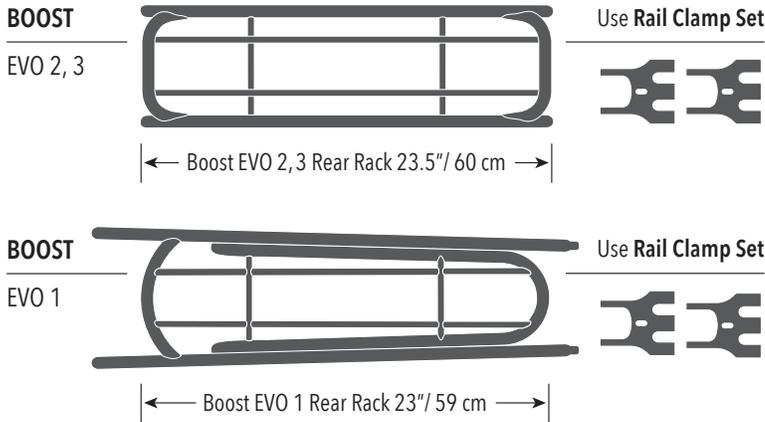


IMPORTANT: Notes to mechanic: See diagram. Install Benno Rail Clamps and Rails only on compatible Benno Boost Rear Racks and use only pre-drilled holes and fittings. M5 bolts are to be tightened to 5Nm and M6 bolts to 6Nm. Do not mount clamps and rails to damaged racks. Use only original Benno Rails with Benno Rail Clamps. Do not modify clamps, racks or rails, change position or drill new holes as this will void any warranties and/or claims for liability.

Notes to owner: Periodically check to make sure all nuts and bolts remain tightened as vibrations may loosen them. Ensure that either Benno Wheel Guards or Utility Pannier Bags remain on the bike while carrying passengers. Always make sure no parts of the body or clothing come near moving parts on the bicycle such as chain, spokes, tires or brakes.


STEP 1: RAIL CLAMP INSTALLATION (NOT INCLUDED/SOLD SEPARATELY)

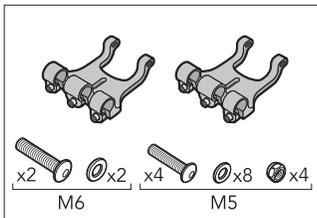


1. Ensure correct hardware count before installation. Separate the 2 larger M6 bolts and washers from the 4 smaller M5 bolts, washers and self-locking nuts.

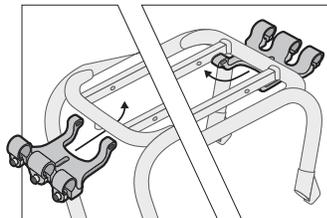

2. Place one clamp on each end of the Benno Utility Rear Rack (front and rear). Insert clamp from below, position between the square center tubes and line up with pre-drilled holes.

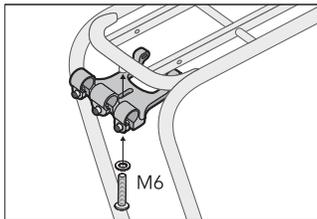


3. Insert large M6 bolt and washer through the slotted hole of the clamp and screw into the fitting on the underside of the rack. **TIGHTEN BOLT SLIGHTLY – CLAMP STILL NEEDS TO BE ABLE TO MOVE.**

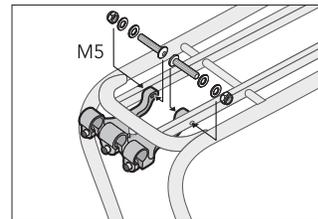

4. Insert smaller M5 bolts through clamp arms and pre-drilled holes in square center tubes. Place washers and self-locking nuts as shown. **TIGHTEN NUTS SLIGHTLY – CLAMP STILL NEEDS TO BE ABLE TO MOVE.**

STEP 2: PLATFORM RAIL INSTALLATION

4. Insert both ends of rail (A) from the left side all the way into the center of the clamps until they come to a stop. Loosen clamp bolts as needed for easy insertion. **DO NOT TIGHTEN YET.**

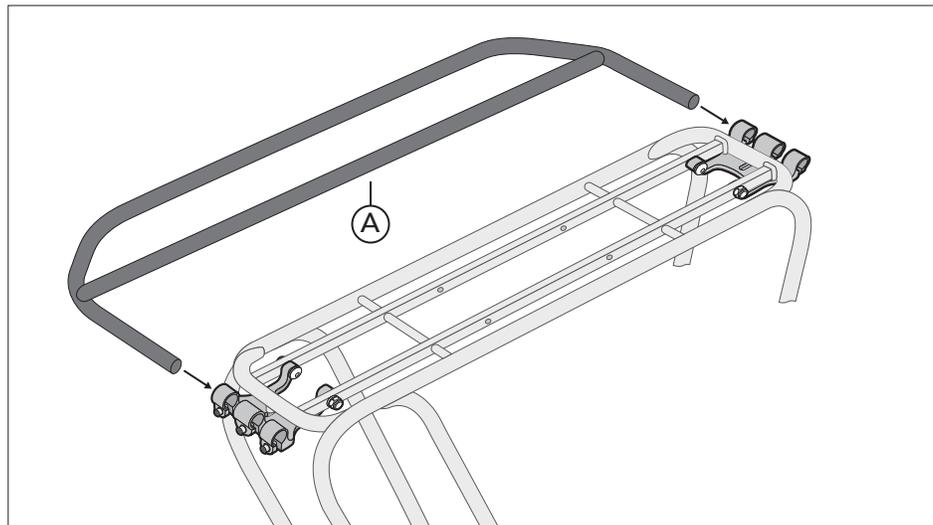


COMPATIBILITY


BOOST EVO 1,2,3

FOR BOOST **EVOLUTION** FINDER GO TO:
BENNOBIKES.COM/BOOST/EVOLUTION

EVO (evolution) replaces model years and refers to design generations.

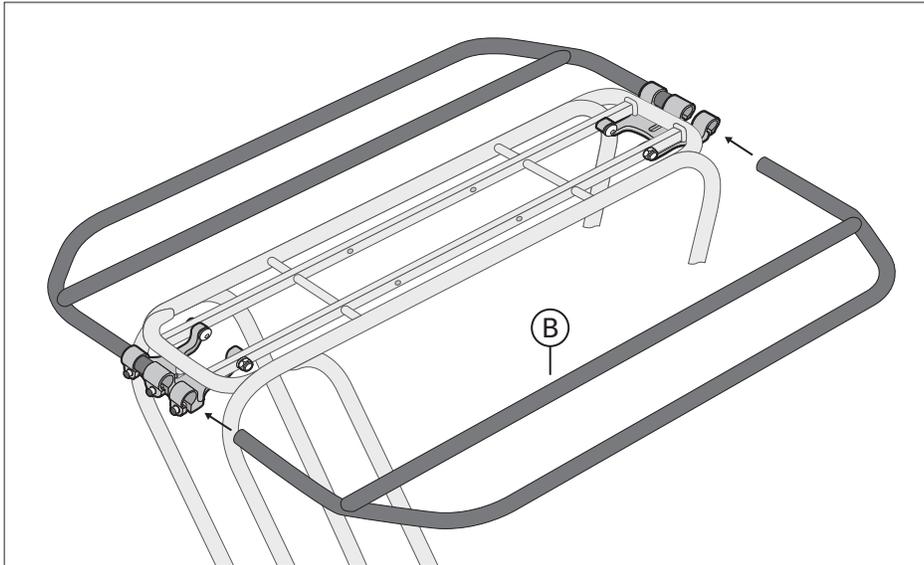

5. Insert both ends of rail (B) from the right side all the way into the center of the clamps until they come to a stop.

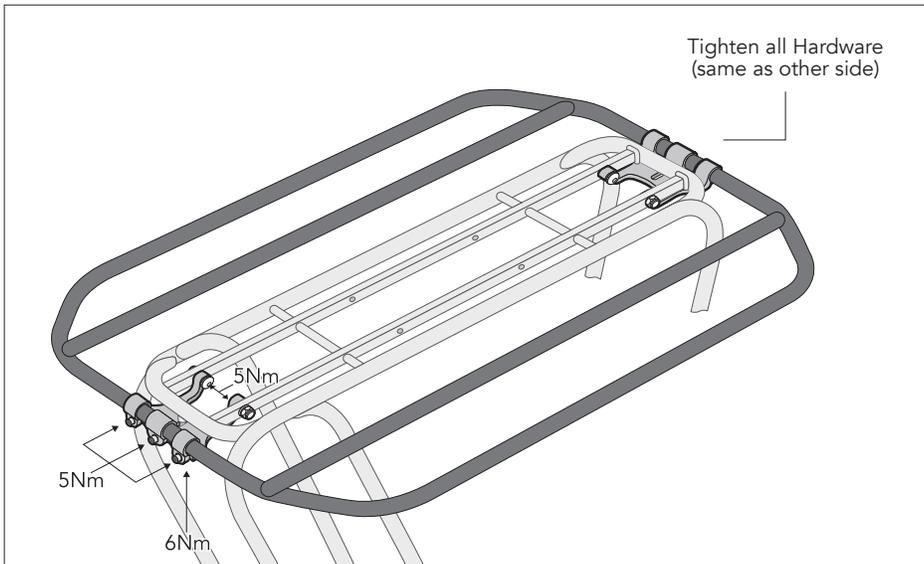

6. Once all pieces are installed, adjust and straighten rails and clamps as needed.

IMPORTANT:
NOW TIGHTEN ALL HARDWARE FIRMLY
 (see Nm in illustration).
 Please double-check all 12 nuts and bolts.

THIS RAIL IS FOR CARGO USE ONLY! DO NOT USE FOR PASSENGERS. BENNO RAILS MAY HELP STABILIZE LOAD DURING NORMAL OPERATION BUT DO NOT PROTECT IN THE EVENT OF AN ACCIDENT OR BIKE FALLING OVER. RAILS DO NOT INCREASE MAX LOAD INDICATED ON RACK. DO NOT SIT OR STAND ON RAILS.