


MINI SIDeloader SET INSTALLATION

For Benno® Boost (EVO 1,2,3,4) with selected Utility Rear Racks

Hardware

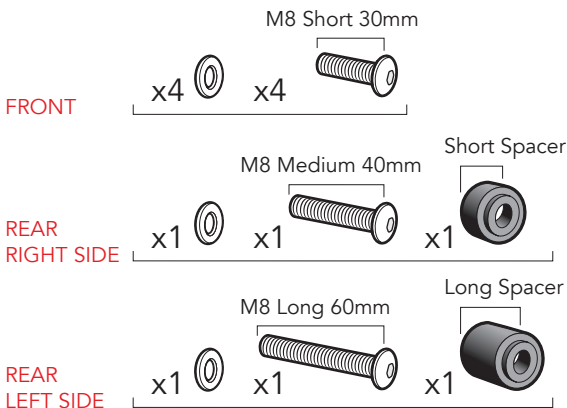


READ CAREFULLY BEFORE INSTALLATION AND USAGE. TO BE INSTALLED BY MECHANIC AT AUTHORIZED BENNO DEALER.

IMPORTANT: Notes to mechanic: See Instructions. Install Benno Mini Sideloaders only on compatible Benno models such as Carry On and Boost in combination with selected Utility Rear Racks. Use only original (included) hardware and pre-drilled holes and fittings. Do not mount Mini Sideloaders to damaged bikes or racks. Do not modify Mini Sideloaders, racks or bikes, change position or drill new holes as this will void any warranties and/or claims for liability.

Notes to owner: Periodically check to make sure all bolts remain tight as vibrations may loosen them. Ensure that either Benno Wheel Guards or Utility Pannier Bags remain on the bike while carrying passengers.

COMPATIBILITY	
BOOST	EVO 1,2,3,4
FOR BOOST EVOLUTION FINDER GO TO: BENNOBIKES.COM/BOOST/EVOLUTION	


EVO (evolution) replaces model years and refers to design generations.

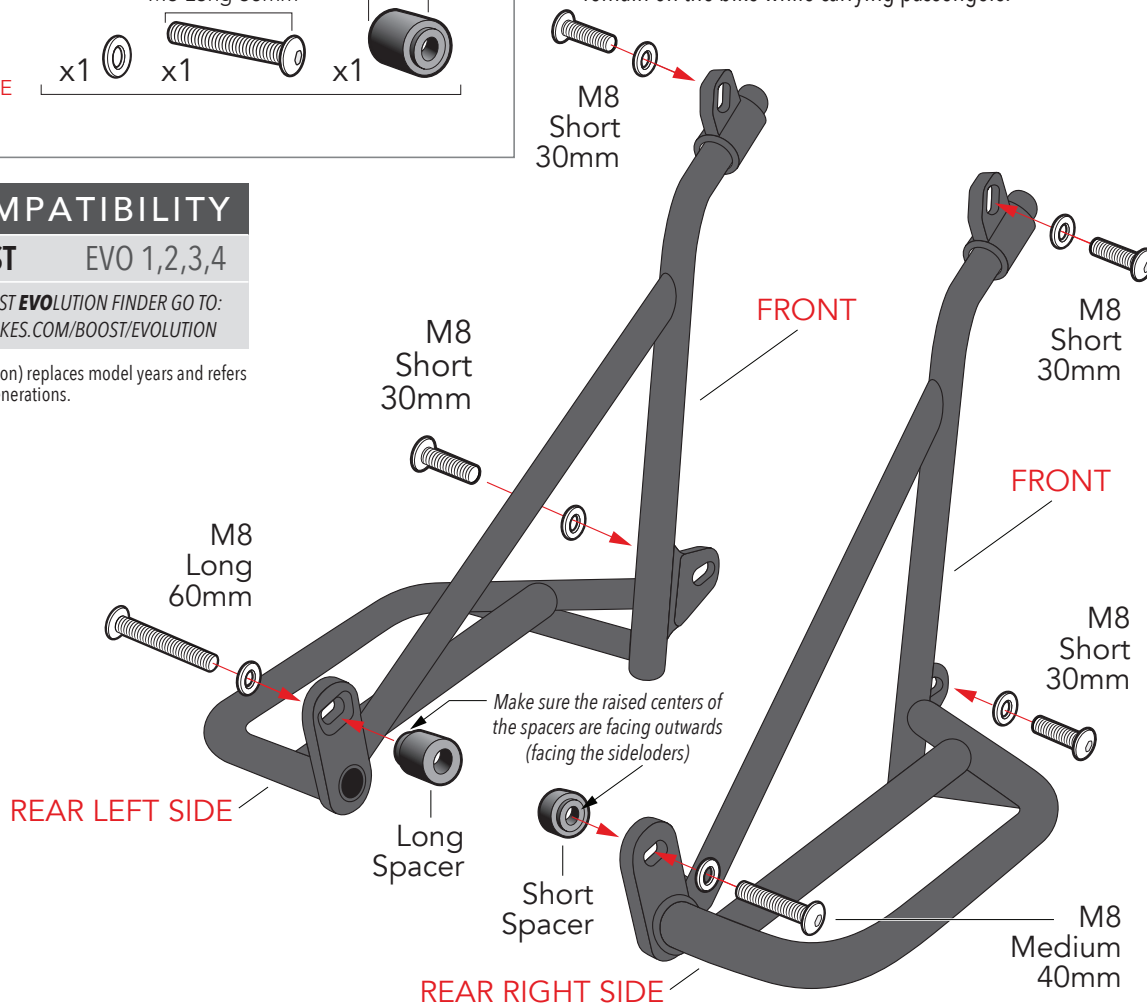

WARNING! **REAR WHEEL MUST BE COVERED!**
INSTALL BENNO WHEEL GUARDS OR UTILITY PANNIER BAGS WHEN CARRYING PASSENGERS.
FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY!



WHEN CARRYING PASSENGERS, REAR WHEEL MUST BE COVERED! INSTALL BENNO WHEEL GUARDS OR UTILITY PANNIER BAGS. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY! MAKE SURE THAT NO PARTS OF THE BODY OR CLOTHING COME NEAR MOVING PARTS ON THE BICYCLE, SUCH AS CHAIN, SPOKES, TIRES OR BRAKES. DO NOT STAND ON MINI SIDeloaders. MAX SIDE LOAD IS 15KG/35LB EACH SIDE. HOWEVER, COMBINED RACK LOAD (DECK+SIDES) NOT TO EXCEED 60KG/130LB. FASTEN CARGO SECURELY AND MAKE SURE ALL STRAPS AND HOOKS ARE TIGHTENED.

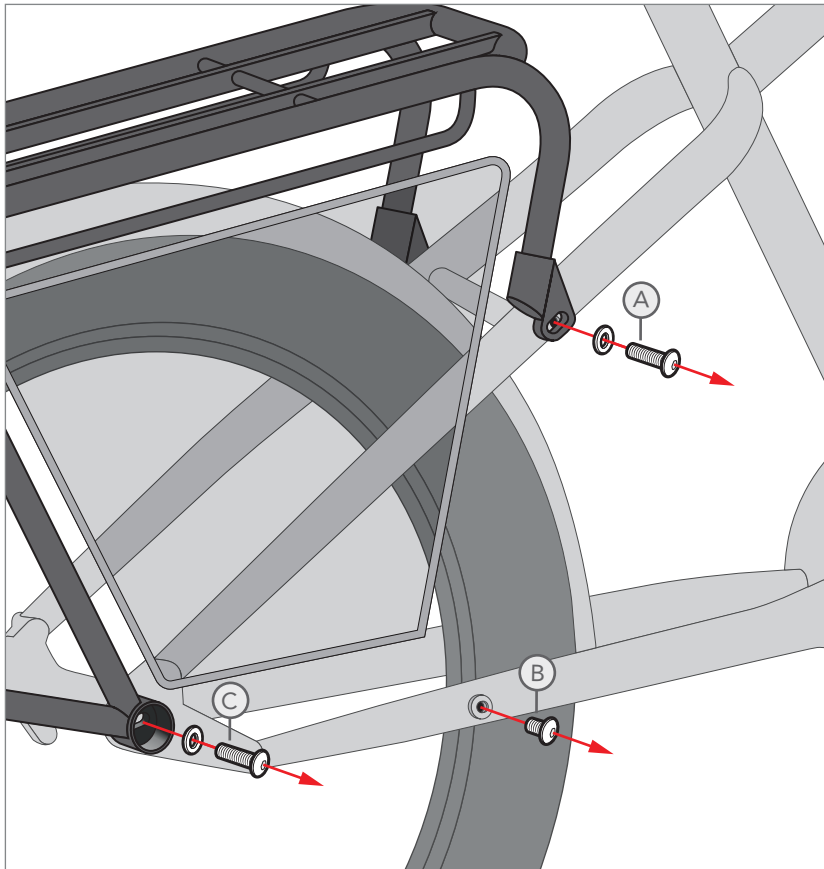

Step 1:

Remove all 3 bolts and washers **(A)**, **(B)** and **(C)** on the right side of the rack (as shown). Loosen (but do not remove) the same 3 bolts and washers on the left side of the rack (not shown).

Step 2:

Take right sideloader and make sure bolt **(D)** is loose and the forward upper bracket can move back and forth for easy alignment.

Step 3:

Insert the short spacer **(E)** into the right side rear leg of the rack. The end with the raised center needs to point outwards (facing the sideloader). Use M8 Medium 40mm bolt **(F)** and washer to secure sideloader and rack by carefully hand tightening the bolt through the spacer and rear rack into the frame eyelet (as shown) - do not fully tighten yet.

Step 4:

Insert M8 Short 30mm bolt **(G)** and washer through the upper front bracket of the sideloader and rack and carefully hand tighten into the frame eyelet (as shown) - do not fully tighten yet.

Adjust position of sideloader to line up with the lower front frame eyelet and secure with M8 Short 30mm bolt **(H)** and washer into the frame.

Step 5:

Now install left sideloader on the left side of the rack, repeating the same steps for proper installation.

Please note: For the left side installation use the long spacer and M8 Long 60mm bolt to attach the sideloader through the lower rear leg of the rack to the eyelet of the frame.

Step 6:

Give both sideloaders a final adjustment to align with rack and **FIRMLY TIGHTEN ALL EIGHT BOLTS: (F), (G), (H) AND (D) ON BOTH SIDES.**

Step 7:

IMPORTANT!
INSTALL BENNO WHEEL GUARDS OR UTILITY PANNIER BAGS WHILE CARRYING PASSENGERS! FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY!

After installation, take a short test ride in order to check for secure fit and ensure that everything works correctly.

Notes to owner: Periodically check to make sure all bolts remain tight as vibrations may loosen them. Ensure that either Benno Wheel Guards or Utility Pannier Bags remain on the bike while carrying passengers.

